Ritter®

# Installation Instructions

## Maximum Restraint Package for Model 111-013 Chair

### KIT COMPONENTS

| Part Number | Description | Qty. |
|---|---|---|
| 028-0170-00 | Upholstery Armboard | 2 |
| 029-0526-00 | Restraint Strap, Armboard | 10 |
| 053-0148-00 | Restraint Belt, Chair | 5 |
| 030-1135-00 | Arm Shelf Weldment | 2 |
| 030-1136-00 | Support Weldment, RH | 1 |
| 030-1139-00 | Support Weldment, LH | 1 |
| 516-0349-00 | Knob, hand | 2 |
| 040-0375-40 | Screws (3/8-16 x 3/4") | 4 |
| 046-0004-00 | Wrench, Allen (7/32") | 1 |
| 003-0908-00 | Installation Instructions | 1 |

### REQUIRED TOOLS

7/32" Allen Wrench ( Included in kit ).

### 1




**DANGER**

**Unplug chair from electrical outlet.**

### 2




**A.** Place right and/or left hand support weldment in position.

**B.** Align two holes in bracket with two holes on side of chair back support and secure with two screws.

**NOTE**

Use allen wrench, supplied with kit, to tighten screws.
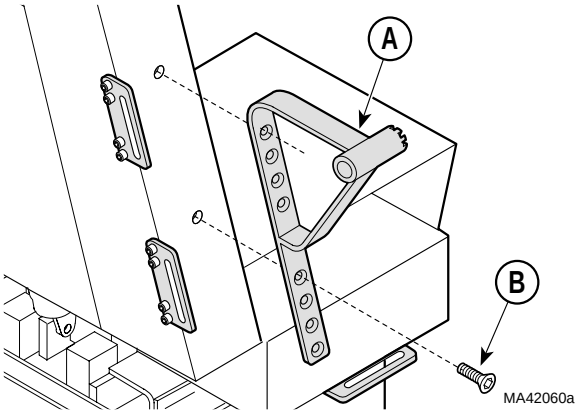
### 3




**A.** Unscrew knob from pivot shaft of arm shelf weldment.

**B.** Insert pivot shaft of arm shelf weldment thru pivot tube of support weldment.

### 4

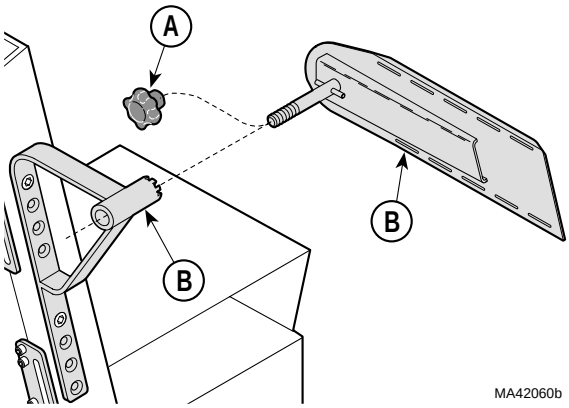


**A.** Install upholstered armboard.

**B.** Install knob on pivot shaft, move armboard to desired position, retighten pivot knob.

**NOTE**

Slots are located in armboards and chair brackets for installation of restraint straps and belts.

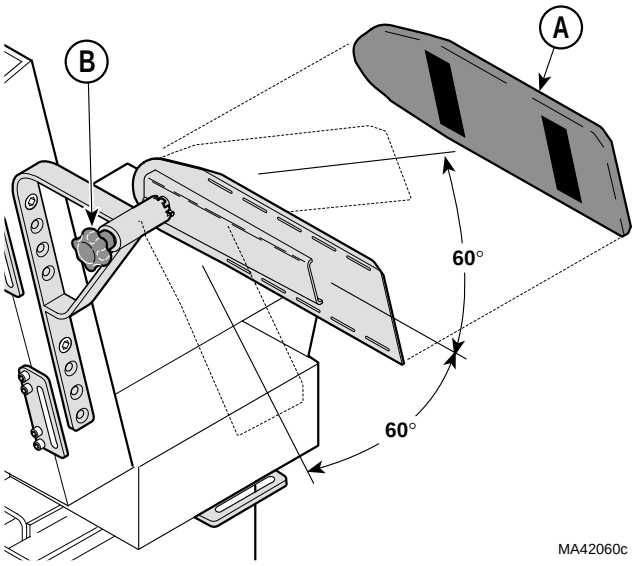**C.** Plug table power cord into wall outlet.

MIDMARK®

**003-0908-00 Rev. A (1/98)**

© Midmark Corporation - 1998

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542